




Sensor Faucets and Flush Valves

# H-7000E

## AC Powered Sensor Operated Faucet Installation Instructions

### Installation Instructions:

1. Attach the plug-in adapter(6) to the AC connector(2) and plug the plug-in adapter into a powered outlet. Place hand in front of spout, it should click. If not, check the connection between the AC connector and plug-in adapter.
2. Connect the supply tube(5) to the faucet by turning the threaded ends into the bottom of the body(1). Teflon tape is **NOT REQUIRED**. **DO NOT USE PIPE DOPE.**
3. Remove the washer(3) and lock nuts(4) and slide the faucet supply rods through the deck hole. If there are 3 holes, use the cover plate(4" or 8") from Hydrotek, call 800-922-9883. Tighten faucet to deck using washer(3) and lock nuts(4).
4. Connect in-line filter(7) to the supply tube and the in-line filters to the stop valves(8). A 3/8" union connector (*provided by others*) is required to connect the inline filters to the stop valves.
5. Turn on water from the stop valve and check for leaks.
6. Place hand in front of the sensor eyes, water should start to flow. Remove hands, water stops.
7. **IMPORTANT:** The control stop valve should never be opened to the point where the flow from valve exceeds the flow capability of the sink fixture. In the event of a valve failure, the sink fixture must be able to accommodate a continuous flow from the valve.
8. **IMPORTANT:** This product contains mechanical components that are subject to normal wear. Periodical maintenance is required in order to maintain the faucet performance.
9. **DO NOT USE** abrasives, acids or cleaning fluids to clean Hydrotek Sensor faucet. Use only soap and water then wipe with clean cloth or towel.

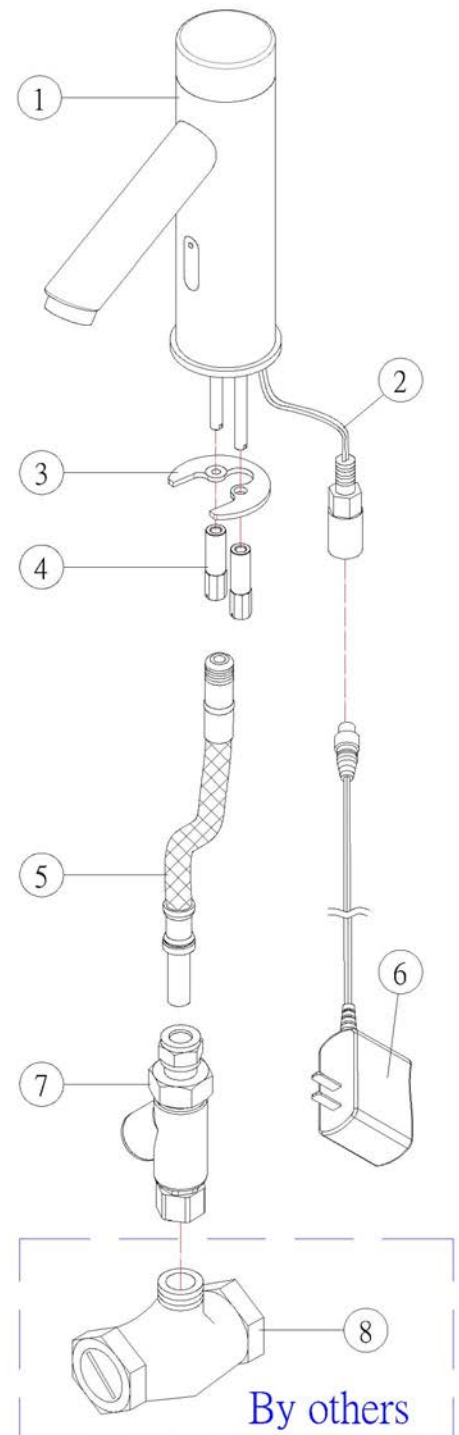

### Parts:

- |                 |                                    |
|-----------------|------------------------------------|
| 1. Body         | 5. Supply Tube                     |
| 2. AC Connector | 6. Plug-in Adapter                 |
| 3. Washer       | 7. In-Line Filter                  |
| 4. Lock Nut (2) | 8. Stop Valve (provided by others) |

**HYDROTEK INTERNATIONAL, INC.**  
 5055 Forsyth Commerce Rd., Ste 124  
 Orlando, FL 32807  
 800.922.9883 (Phone)  
 866.670.5580 (Fax)  
 www.hydrotekintl.com

